

# CABIN AIR FILTER

## IDENTIFICATION / INSTALLATION

# GM

# AF1151 / AFC1151

**Chevrolet Venture;**  
**Oldsmobile Silhouette APV;**  
**Pontiac Montana, Trans Sport APV**




**OE:** 52470574, 52482929

**Fits:** 1997-2000 Chevrolet Venture,  
Oldsmobile Silhouette APV  
1999-2000 Pontiac Montana  
1996-99 Pontiac Trans Sport APV


**Size:** 9 1/32 x 4 9/16 x 2 7/32  
(229.4 x 115.9 x 56.4)

**A. Gskt.:** [1] Attached

**Note:** 2 Required per Vehicle (Sold as Set of 2)

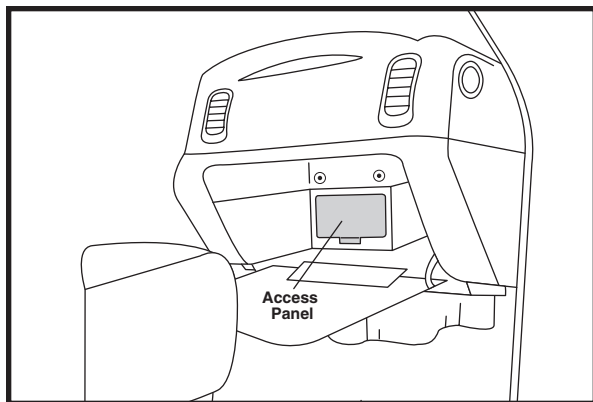

1. Open passenger side door.
2. Open glove compartment.
3. Remove access panel by pulling up and out.

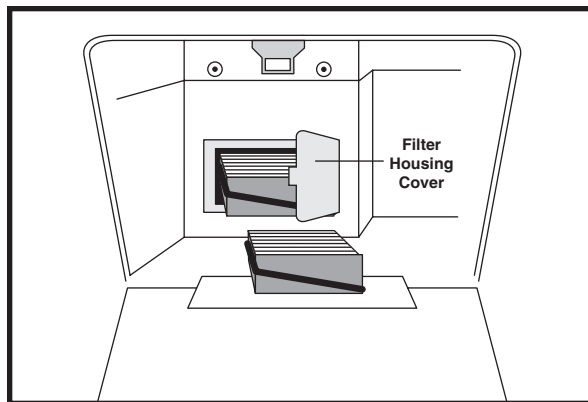

4. Open filter housing cover by squeezing tab on left.
5. Remove first filter.
6. Slide second filter to the right and then out.
7. Replace filters in reverse order and reassemble. (Make sure foam is angled in same direction for both filters.)

**Notice:** The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.



4400 East Highway 30 ■ P.O. Box 6006  
Kearney, NE 68848-6006  
PH: 800-887-8836 ■ FAX: 800-210-6906  
Internet: [www.hastingsfilter.com](http://www.hastingsfilter.com)