

CABIN AIR FILTER

IDENTIFICATION / INSTALLATION


GM

AFC1239


**Chevrolet Cobalt, Cobalt SS, HHR, HHR SS;
Pontiac G5, Pursuit;
Saturn ION, ION Red Line**



- OE:** 52493319
- Fits:** 2005-10 Chevrolet Cobalt
2008-10 Chevrolet Cobalt SS, HHR SS
2006-on Chevrolet HHR
2007-10 Pontiac G5
2005-06 Pontiac Pursuit
2003-07 Saturn ION
2004-07 Saturn ION Red Line
- Size:** 9 23/32 x 8 1/2 x 29/32
(246.9 x 215.9 x 23.0)
- A. Gskt.:** [2] Attached

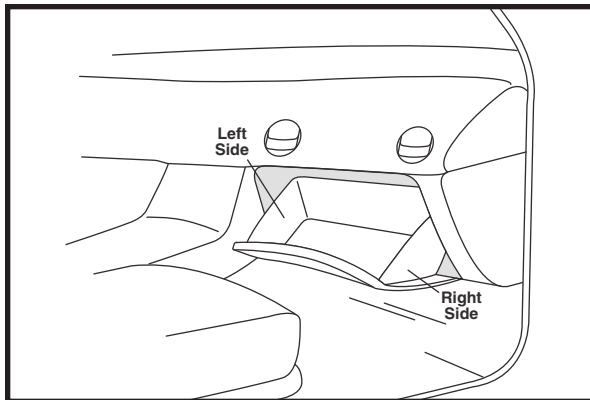

1. Open passenger side door.
2. Open glove compartment.
3. Push in on left and right sides of glove compartment to release glove compartment.

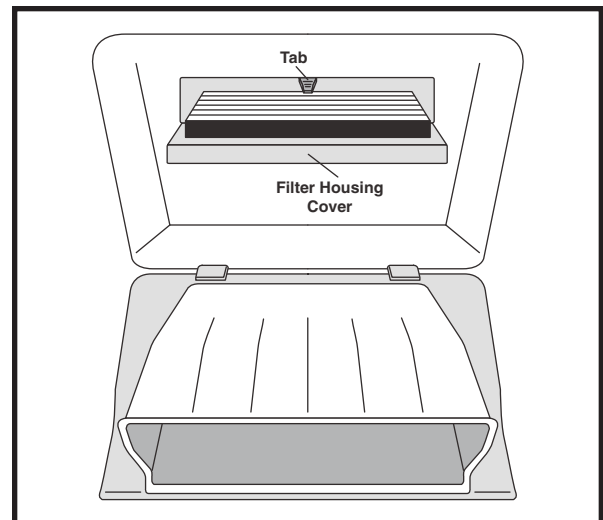

4. Lift up on tab and flip down filter housing cover.
5. Replace filter and reassemble.

Notice: The information provided is based on the latest authoritative information available at press time. However, due to manufacturers' changes, and year and model variations, Hastings Premium Filters cannot be responsible for misapplications and instruction errors.



4400 East Highway 30 ■ P.O. Box 6006
Kearney, NE 68848-6006
PH: 800-887-8836 ■ FAX: 800-210-6906
Internet: www.hastingsfilter.com